

LED 10w RGBWA







SAFETY INSTRUCTIONS

•Please keep this User Manual for future consultation. If you sell the unit to another user, be sure that they also receive this instruction booklet.

•Unpack and check carefully there is no transportation damage before using the unit. •Before operating, ensure that the voltage and frequency of power supply match the power requirements of the unit.

•It's important to ground the yellow/green conductor to earth in order to avoid electric shock.

•The unit is for indoor use only.

•The unit must be installed in a location with adequate ventilation, at least 50cm from adjacent surfaces. Be sure that no ventilation slots are blocked. •Disconnect mains power before fuse replacement or servicing.

•Make sure there are not flammable materials close to the unit while operating as it is fire hazard.

·Use safety cable when fixes this unit.

•Maximum ambient temperature is 40°C and don't operate it where the temperature is higher than this.

•There are no user serviceable parts inside the fixture. Do not open the housing or attempt any repairs by yourself. In the unlikely event your fixture may require service, please contact the nearest authorized technical assistance center and always use the same type spare parts.

•The housing must be replaced if they are visibly damaged.

•Do not touch any wire during operation as high voltage may cause electric shock.

•Do not look directly at the LED light beam while the fixture is on.

•Do not look at the beam light directly to avoid any visual problems.

•Possibly hazardous optical radiation emitted from this product.

2. SPECIFICATION

Power input: AC 230V, 50 Hz

Power consumption: 84W@240V

Current: 0.52A@240V Fuse: 3A/250V@240V

LED: 12*5-in-1 10W

Beam angle: 25 degree

Working environment: -10°€40 °C

DMX channels: 5, 7, 9 CH

DMX linking: 3-pin

Operation mode: DMX mode, slave mode, built-in programs, auto running, sound active, static color Lumen:

R 535lux@2m

G 740lux@2m

B 840lux@2m

W 980lux@2m

A 390lux@2m

RGBWA 3050lux@2m

Power linking: 13pcs/240V

Weight: 4.24kg

Size: 233*300**289cm

3. **OPERATION**

This series of product has rich effect programs, easier operation, there are six working modes:

3.1. Built-in Programs

- Pr.[] |_". menu " 1) Press the "MODE", enter built-in programs mode
- 2) Press the "UP" or DOWN", select the effect programs
- 3) When the LED display show "Pr. 11 1, press the "SETUP" can enter into static color editing environment, press the "UP" or "DOWN" can select the static colors (1.rgb, 2.-r,
- 3.--g, 4.—b, 5.-u, 6.—A, 7.-rg, 8.—rg, 9.-rb, 10.rb, 11.gb, 12.ru, 13.gu, 14.bu, 15.rA, 16.gA,
- 17.bA, 18.uA, 19.on, -OFF), and then press the "SETUP" can set the preset static color strobe
- "F500", through the "UP" or "DOWN" can adjust the strobe speed".

When the LED display show "Pr. I Pr. II", the first time press the "SETUP", will display .5 P.8 O ", now through the "UP" or "DOWN" can set the programs operation speed 5P.00~5P.FL ; the second time press the "SETUP", will show 10 now through the "UP" or "DOWN" can set the programs strobe speed ~

3.2. Auto Running Mode

Press the "MODE", enter auto running mode menu "AUTO".

• In this mode, will operating the program segment which in built-in programs, the speed as same as the setting operation speed in built-in programs mode.

3.3. DMX Mode

- 1) Press the "MODE", enter DMX mode menu $d_{\rm min}$ $d_{\rm min}$
- 2) Press the "UP" or "DOWN", set the DMX

 Press the "SETUP", enter DMX working mode menu **X-ch**.
- 4) Press the "UP" or "DOWN", set the DMX working modes: 5 c h, 7 c h, 9 c h,

DMX mode1:5-ch

CH1	CH2	СНЗ	CH4	CH5
R	G	В	W	Α
0-255	0-255	0-255	0-255	0-255

DMX mode 2: 7 - 5 h

CH1	CH2	CH3	CH4	CH5	CH6	CH7	
R	G	В	W	Α	DIMMER	Strobe	
0-255	0-255	0-255	0-255	0-255	0-255	0-255	

DMX mode 2: 9-ch

CH1	CH2	CH3	CH4	CH5	CH6	CH7		CI	18	СН9					
DIMMER	R	G	В	W	Α	Program		SPEED		Strobe					
						CH2—CH6	0	0.55	0.40						
										OFF	0-12	4			
															RGB
									R	26-38	ž.				
									-	G	39-51				
							janv-22	В	52-64	0-255					
								W	65-77						
				0-255	0-255			A	78-90						
		0-255	0-255					RG	91-103						
0-255	0-255							RG	104-116						
								RB	117-129						
								RB	130-142						
								GB	143-155						
								RW	156-168						
								GW	169-181						
								BW RA	182-194 195-207						
								GA	208-220						
								BA	221-233						
								WA	234-246						
								RGBWA	247-255						
							23-45	KODWA	247-233						
						Pr.03	46-68								
						Pr.04	69-91								
						Pr.05	92-114								
						Pr.06	115-137								
						Pr.07	138-160	0-255							
					Pr.08	161-183									
						Pr.09	184-206								
						Pr.10	207-229								
						Pr.11	230-252								
						SoundMode	225 ACM 107 ASM 107	Sensitivity		3					

3.4. Master/ slave Mode

Press the "MODE", enter slave mode "5 L R L".

If in this mode, the fixture working mode will all follow the host changing.

3.5. Sound Active Mode

- 1) Press the "MODE", enter sound active mode "Soud".
- 2) Press the "SETUP", enter to set the sound active sensitivity.

3.6. Static Color Mode

- 2) Press the "SETUP" can select the static colors: r.255, g.255, b.255, u.255, A.255. 3) Press the "UP" or "DOWN", the user can adjust the monochrome brightness value, the maximum value is 255, will achieve the color dimming effect.





