

Laser Derby instrukcija

Menu structure

| Display | | Function |
|---------|----------|---|
| Addr | A001-512 | DMX start address setup |
| Shou | Sh 1 | Show program 1: LED derby |
| | SP00-99 | Program running speed (slow > fast) |
| | Sh 2 | Show program 2: laser |
| | SP00-99 | Program running speed (slow > fast) |
| | Sh 3 | Show program 3: LED derby + Laser |
| | SP00-99 | Program running speed (slow > fast) |
| | Sh 4 | Show program 4: LED derby + laser with changing running speed |
| Soun | on | Sound control show programs 1-4 |
| | off | Automatic mode show programs 1-4 |
| Ver | | Indication of the firmware version |
| TeNP | | Indication of the internal temperature |

Automatic mode

In automatic mode, 4 show programs are available of which 3 run at an adjustable speed. Make sure sound control in menu item **Soun** is disabled (**off** setting).

- 1 Press the **MENU** button so many times until **Shou** is indicated in the display. Confirm with the **ENTER** button.
- 2 Use the **UP** and **DOWN** buttons to select the desired show program. Confirm with the **ENTER** button. The display indicates menu item running speed.
- 3 Use the **UP** and **DOWN** buttons to adjust the running speed of the program from **SP00** (slow) to **SP99** (fast).

Sound control

Via the integrated microphone the unit can perfectly reproduce the show programs to the rhythm of the music (sufficient bass provided).

- 1 Select the desired show program in menu item **Shou** as described above.
- 2 Then press the **MENU** button so many times until **Soun** is indicated in the display. Confirm with the **ENTER** button.
- 3 Activate sound control mode by selecting **on** with the **UP** and **DOWN** buttons.
- 4 Adjust the microphone sensitivity to the volume of the music with the **SENSITIVITY** control.