

**LED Display On/Off:**

To set the LED display to turn off after 10 seconds, press the MODE button until 0001 is displayed, press the UP button to display 0002. Now the display will disappear after 10s. Press any button for at least 10s to turn the display on again. Be advised though that the display will turn off automatically after 10 seconds.

To set the display press the MODE button until 0001 is displayed. The display will now stay on at all times.

ds-1= LCD display on at all times.

ds-2= LCD display shuts off after 10 seconds.

**Master-Slave Operation:**

This function will allow you to link units together to run in a Master-Slave mode. In Master-Slave operation one unit will act as the controlling unit and the others will react to the controlling units built-in programs. Any unit can act as a Master or as a Slave however, only one unit can be programmed to act as the "Master."

**Master-Slave Connections and Settings:**

1. Daisy chain your units via the XLR connector on the rear of the unit. Use standard XLR microphone cables to link your units together. Remember that the Male XLR connector is the input and the Female XLR connector is the output. The first unit in the chain (master) will use the female XLR connector only. The last unit in the chain will use the male XLR connector only.
2. You will also have to link the power cords to each other, as you did with the XLR cables.
3. Choose your Master unit, and press the MODE button until "5-XX" is displayed. You are now in Master mode and you can use the UP or DOWN buttons to select your desired show from 0-20 or Sound Active (5-So)
4. With the "Slave" unit(s) press the MODE button until "4-XX" is displayed. They will now follow the "Master" unit.

**Dance Mode:**

There are two dance programs to choose from, fast dance and slow dance.

1. Plug the fixture in and press the MODE button until "1--X" is

displayed. "X" represents the current number being displayed.

2. Select your desired dance program by pressing either the UP or DOWN buttons.
3. 1--1 is a fast dance program. 1--2 is a slow dance program.

**DMX Mode:**

The Dekker has 2 DMX Channel modes. You can choose between 2 DMX channels or 8 DMX Channels. Operating through a DMX controller give the user the freedom to create their own programs tailored to their own individual needs.

1. This function will allow you to control each individual fixture's traits with a standard DMX 512 controller such as the Elation® Show Designer™ or the Elation® DMX Operator.™
2. To run your fixture in DMX mode, plug in the fixture via the XLR connections to any standard DMX controller.
3. Choose your DMX channel mode -  
Press the MODE button until "2XXX" is displayed, this is 2 channel mode. Press the UP or DOWN button to find your desired DMX address.

Press the MODE button until "3XXX" is displayed, this is 8 channel mode. Press the UP or DOWN button to find your desired DMX address.

4. Please see pages 10-11 for DMX values and traits.

**Adjustment Mode:**

1. Plug the fixture in and press the MODE button until "6-XX" is displayed.
2. Select your desired program in mode 6 by pressing either the UP or DOWN buttons. There are 10 programs to choose from.
3. Adjust the program speed by pressing the MODE button until "7-XX" is displayed. Press either the UP or DOWN buttons to adjust the speed of the program. When "7-sd" is displayed the program is running in sound active mode.

**UC3 F Mode:**

Choose a color to remain static.

1. Plug the fixture in and press the MODE button until "UC3 F" is displayed.