


8.MENU OPERATIONS

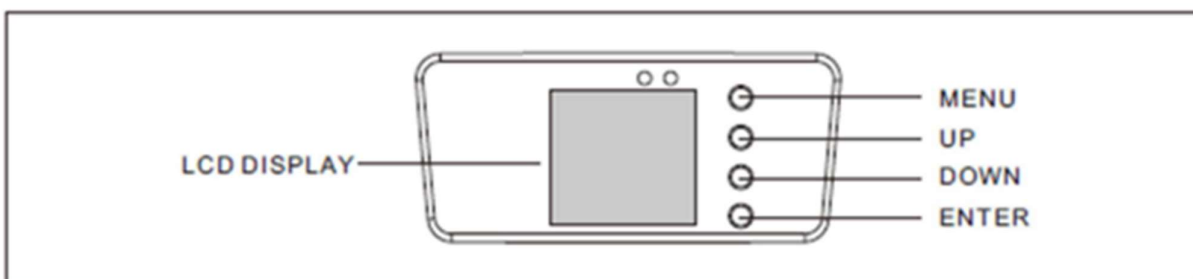

MENU		Description	
DMX (Function Mode)	Dmx Address	A001~AXXX	DMX address setting
	Channel Mode	CH14 MODE	Standard mode
		CH12 MODE	Vector mode
	Auto Run	Program1~9 Master/Alone	Auto run
	Music Run	Program1~9 Master/Alone	Sound Control
SET (Fixture Set)	Reset Default	Yes/No	Reset Default
	Signal Set	Wire	Wire DMX
	Reverse Pan	(On/Off)	Reverse Pan
	Reverse Tilt	(On/Off)	Reverse Tilt
	Select Pan	630°/540°/360°	Pan Degree, default is 540°
	Select Tilt	270°/180°/90°	Tilt Degree, default is 270°
	Mic Sensitivity	0~99%	MIC Sensitivity Setting
	OFF Signal Mode	(On/Off)	OFF at original status and ON at reset status when no DMX signal
Half Color Wheel	(On/Off)	Half color Select	
Manu (Manual)	Reset	Total Reset	Total Reset
		Scan Reset	Scan Reset
		Color Reset	Color Reset
		Gobo Reset	Gobo Reset
		Others Reset	The Others Reset
	Channel	PAN=XXX.....	Channel Control
ADV (Advanced) (Access Code 000)	Calibration	PAN=XXX.....	Calibration