Channel	Value	Function
1		SHOW MODE
	0 - 9	NOFUNCTION
	10 - 44	SHOW 1 (LED)
	45 - 79	SHOW 2 (STROBE)
	80 - 114	SHOW 3 (LASER)
	115 - 149	SHOW 4 (LED & LASER)
	150 - 184	SHOW 5 (LED & STROBE)
	185 - 219	SHOW 6 (LASER & STROBE)
	220 - 255	SHOW 0 (LED, LASER, & STOBE)
2		SHOW SPEED/SOUND SENSE
	0 - 247	SHOW SPEED SLOW - FAST
	248 - 255	SOUND ACTIVE

Stinger Star	14 Channel Mode
--------------	-----------------

Channel	Value	Function
1		SHOW MODE
	0 - 9	NOFUNCTION
	10 - 44	SHOW 1 (LED)
	45 - 79	SHOW 2 (STROBE)
	80 - 114	SHOW 3 (LASER)
	115 - 149	SHOW 4 (LED & LASER)
	150 - 184	SHOW 5 (LED & STROBE)
	185 - 219	SHOW 6 (LASER & STROBE)
	220 - 255	SHOW 0 (LED, LASER, & STOBE)
2		COLOR MACRO/SHOW SPEED
	0 - 9	NOFUNCTION
	10 - 198	15 COLOR CHANGE
	199 - 225	SINGLE COLOR FADE SLOW - FAST
	226 - 255	MIXED COLOR FADE SLOW - FAST
		WHEN USING CHANNEL 1
	0 - 247	SHOW SPEED SLOW-FAST
	248 - 255	SHOW IS SOUND ACTIVE

Stinger Star		14 Channel M
Channel	Value	Function
3	0 - 9 10 - 244 245 - 255	RGBW STROBING STROBING OFF STROBING SLOW - FAST SOUND ACTIVE STROBE
4	0 - 127 128 - 255	CHANNEL 2 MOTOR CONTROL SELECT MOTOR POSITION MOTOR MOVEMENT SLOW - FAST
5	0 - 134 135 - 255	LED CONTROL LED OFF LED CHASE
6	0 - 127 128 - 255	LED CHASE SPEED/LED STROBING LED CHASE SPEED SLOW - FAST CHASE W/STROBE SLOW - FAST SLOW - FAST
7	0 - 9 10 - 43 44 - 77 78 - 127 128 - 255	LASER COLOR LASER OFF RED LASER GREEN LASER RED & GREEN LASERS COLOR CHASE SLOW - FAST
8	0 - 11 12 - 255	LASER PATTERNS OFF LASER PATTERN SELECTION
9	0 - 63 64 - 127 128 - 191 192 - 255	LASER PATTERN SIZE PATTERN SIZE ADJUSTMENT ZOOM SMALL - BIG SLOW - FAST ZOOM BIG - SMALL SLOW - FAST ZOOM RANDOM SLOW - FAST
10	0 - 127 128 - 191 192 - 255	LASER PATTER ROTATION SELECT PATTER ANGLE CLOCKWISE ROTATE SLOW - FAST COUNTER-CLOCKWISE ROTATION SLOW - FAST

Stinger Star		14 Channel Mode
Channel	Value	Function
11		LASER HORIZONTAL POSITION
	0 - 127	SELECT HORIZONTAL POSITION
	128 - 255	HORIZONTAL MOVE SLOW - FAST
12		LASER VERTICAL POSITION
	0 - 127	SELECT VERTICAL POSITION
	128 - 255	VERTICAL MOVE SLOW - FAST
13		LASER PATH
	0 - 255	SELECT LASER PATH
14		LASER PATH SPEED
	0 -255	PATH SPEED SLOW - FAST

Stinger Star Fuse Replacement

Disconnect the unit from its power source. Remove the power cord from the unit. Once the cord has been removed, you will find that the fuse holder is located inside the power socket. Insert a flat-head screw driver into the power socket and gently pry out the fuse holder. Remove the bad fuse and replace with a new one. The fuse holder also has a holder for a spare fuse.

Stinger Star Cleaning

Fixture Cleaning: Due to fog residue, smoke, and dust cleaning the internal and external optical lenses and mirror should be carried out periodically to optimize light output. Cleaning frequency depends on the environment in which the fixture operates (I.e. smoke, fog residue, dust, dew). In heavy club use we recommend cleaning on a monthly basis. Periodic cleaning will ensure longevity, and crisp output.

- 1. Use normal glass cleaner and a soft cloth to wipe down the outside casing.
- 2. Use a brush to wipe down the cooling vents and fan grill.
- 3. Clean the external optics and mirror with glass cleaner and a soft cloth every 20 days.
- 4. Clean the internal optics with glass cleaner and a soft cloth every 30-60 days.
- 5. Always be sure to dry all parts completely before plugging the unit back in.

Stinger Star Trouble Shooting

Trouble Shooting: Listed below are a few common problems that you may encounter, with solutions.

No light output from the unit;

- 1. Be sure the external fuse has not blown. The fuse is located on the rear panel of the unit.
- 2. Be sure the fuse holder is completely and properly seated.

Unit does not respond to sound;

- 1. Low frequencies (bass) should cause the unit to react to sound. Tapping on the microphone, quiet or high pitched sounds may not activate the unit.
- 2. Check the sound sensitivity level.