Jellydome

Operating Modes:

Stand-Alone Operation (Sound Active and Auto Program): *Sound Active:*

- 1. Put dipswitch #1 in the "On" position. The unit will react to the low frequencies of music via the microphone.
- 2. Dipswitch 3 will reverse the rotation.

Auto Program:

1. To run the Auto Program, put dipswitches 1 & 2 in the "On" position.

Dipswitch 3 will reverse the rotation.

Dipswitches 4, 5, & 6 will control the speed of rotation.

2. The optional *UC3 Controller* (not included) may be used to control different functions including blackout. See the next page for UC3 controls.

Master-Slave Operation:

This function will allows you to link units together to run in a Master-Slave mode. In Master-Slave operation one unit will act as the controlling unit and the others will react to the controlling units built-in programs. Any unit can act as a Master or as a Slave however, only one unit can be programmed to act as the "Master."

- 1. Using standard XLR microphone cables, daisy chain your units together via the XLR connector on the rear of the units. Remem- ber the Male XLR connector is the input and the Female XLR connector is the output. For longer cable runs we suggest a terminator at the last fixture.
- 2. Simply daisy chain the units together using XLR cables.
- 3. For the Master unit put dipswitch 1 in the "On" position, and all other dipswitches in the "Off" position. For the Slave units, put any dipswitch in the "On" position, except, the #1 dipswitch. The #1 dispswitch must stay in the "Off" position on all Slave units
- 3. The optional *UC3 Controller* (not included) may be used to control different functions including blackout. See the next page for UC3 controls.